

art.LV


MOBILE SUPPORTS mod.10/60 in nitrided steel, with reduced dimensions, with bronze cylindrical nut **CCB/A** and accessories.
(article includes Supports Base **BD LV**)

LV support assembled with Supports Base

Fitting on mobile support
with Supports Base below




Fitting on mobile support
with Supports Base on top

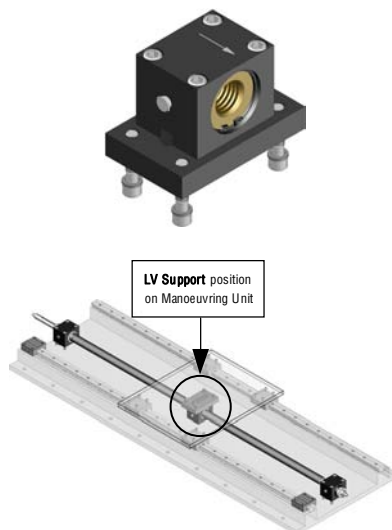

LV support - exploded diagram



> Complete diagrams showing how to fit to the machine are on pages 100 and 102.

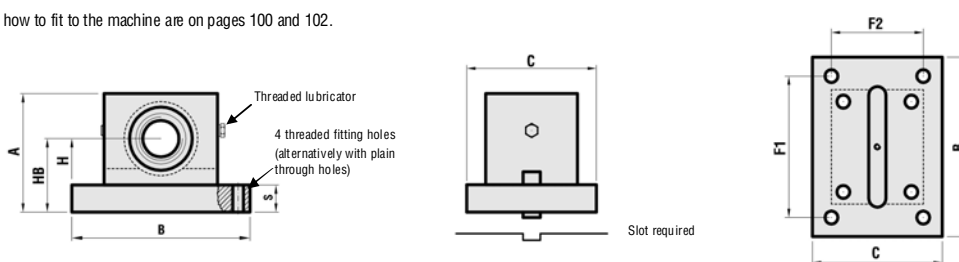

> **C =** Nett size of the support with base **BD LV** (art. on page.86) - Support with right threaded nut available from stock.

> **Approximate weight with accessories, fitting bolts and Supports Base BD LV.**

NUT CCB/A	CODE Dx	ARTICLE Dx	CODE Sx	ARTICLE Sx	A	B BD LV	C	S	H	HB	F1	F2	Hex screws for fitting	Slot required for fitting	Lubricator thread	WEIGHT Kg
TR 10x2	300SM0102R	LV TR 10x2 R	300SM0102L	LV TR 10x2 L	41	75	50	12	15	27	59	34	M6	Ø10x57x2	M6x1	0,610
TR 10x3	300SM0103R	LV TR 10x3 R	300SM0103L	LV TR 10x3 L	41	75	50	12	15	27	59	34	M6	Ø10x57x2	M6x1	0,610
TR 12x3	300SM0123R	LV TR 12x3 R	300SM0123L	LV TR 12x3 L	46	80	50	12	17,5	29,5	64	34	M6	Ø10x62x2	M6x1	0,780
TR 14x3	300SM0143R	LV TR 14x3 R	300SM0143L	LV TR 14x3 L	46	80	50	12	17,5	29,5	64	34	M6	Ø10x62x2	M6x1	0,780
TR 14x4	300SM0144R	LV TR 14x4 R	300SM0144L	LV TR 14x4 L	46	80	50	12	17,5	29,5	64	34	M6	Ø10x62x2	M6x1	0,780
TR 16x4	300SM0164R	LV TR 16x4 R	300SM0164L	LV TR 16x4 L	54	90	60	15	20	35	70	40	M8	Ø12x69x3	1/8G	1,160
TR 18x4	300SM0184R	LV TR 18x4 R	300SM0184L	LV TR 18x4 L	59	100	65	15	22,5	37,5	80	45	M8	Ø12x74x3	1/8G	1,540
TR 20x4	300SM0204R	LV TR 20x4 R	300SM0204L	LV TR 20x4 L	64	100	70	15	25	40	80	50	M8	Ø12x79x3	1/8G	1,840
TR 22x5	300SM0225R	LV TR 22x5 R	300SM0225L	LV TR 22x5 L	64	100	70	15	25	40	80	50	M8	Ø12x79x3	1/8G	1,840
TR 24x5	300SM0245R	LV TR 24x5 R	300SM0245L	LV TR 24x5 L	74	125	80	20	27,5	47,5	95	50	M10	Ø14x91x4	1/8G	2,980
TR 25x5	300SM0255R	LV TR 25x5 R	300SM0255L	LV TR 25x5 L	74	125	80	20	27,5	47,5	95	50	M10	Ø14x91x4	1/8G	2,980
TR 26x5	300SM0265R	LV TR 26x5 R	300SM0265L	LV TR 26x5 L	74	125	80	20	27,5	47,5	95	50	M10	Ø14x91x4	1/8G	2,980
TR 28x5	300SM0285R	LV TR 28x5 R	300SM0285L	LV TR 28x5 L	79	130	80	20	30	50	100	50	M10	Ø14x96x4	1/8G	3,420
TR 30x6	300SM0306R	LV TR 30x6 R	300SM0306L	LV TR 30x6 L	79	130	80	20	30	50	100	50	M10	Ø14x96x4	1/8G	3,420
TR 32x6	300SM0326R	LV TR 32x6 R	300SM0326L	LV TR 32x6 L	79	130	80	20	30	50	100	50	M10	Ø14x96x4	1/8G	3,420
TR 35x6	300SM0356R	LV TR 35x6 R	300SM0356L	LV TR 35x6 L	89	140	100	20	35	55	110	70	M10	Ø14x106x4	1/8G	4,990
TR 36x6	300SM0366R	LV TR 36x6 R	300SM0366L	LV TR 36x6 L	89	140	100	20	35	55	110	70	M10	Ø14x106x4	1/8G	4,990
TR 40x7	300SM0407R	LV TR 40x7 R	300SM0407L	LV TR 40x7 L	104	160	100	25	40	65	125	65	M12	Ø16x118x4	1/8G	7,070
TR 45x8	300SM0458R	LV TR 45x8 R	300SM0458L	LV TR 45x8 L	109	165	120	25	42,5	67,5	130	85	M12	Ø16x123x5	1/8G	8,560
TR 46x8	300SM0468R	LV TR 46x8 R	300SM0468L	LV TR 46x8 L	109	165	120	25	42,5	67,5	130	85	M12	Ø16x123x5	1/8G	8,560
TR 50x8	300SM0508R	LV TR 50x8 R	300SM0508L	LV TR 50x8 L	114	170	120	25	45	70	135	85	M12	Ø16x128x5	1/8G	9,360
TR 55x9	300SM0559R	LV TR 55x9 R	300SM0559L	LV TR 55x9 L	123	200	140	30	47	77	160	100	M14	Ø16x148x5	1/8G	14,000
TR 60x9	300SM0609R	LV TR 60x9 R	300SM0609L	LV TR 60x9 L	129	200	140	30	50	80	160	100	M14	Ø16x148x5	1/8G	14,400

- > The supports above are shown assembled in the **Compact Steel Groups** (see preceding pages) for which it is possible to calculate the total weight by adding them to the weight of the TR screw using the table on page 69.
- > Using the **mobile support LV without Supports Base** it is necessary to ensure that the same holes are provided for supports **DVA** and **DVB** (see preceding pages).
- > To comply with safety regulations it is obligatory to use the locking tabs, the fitting hardware supplied, and ensuring that the arrows engraved in the supports are all facing in the same direction, which for vertical/oblique movements must be facing downwards.